


# DIE LOCATING PINS

PRINTED COPY IS UNCONTROLLED

PIN NUMBER J-96304 IS USED TO LOCATE THE BLANKHOLDER RELATIVE TO THE BULL RING, AND J-96305 IS USED TO LOCATE THE INNER RAM RELATIVE TO THE INNER RAM PLATE

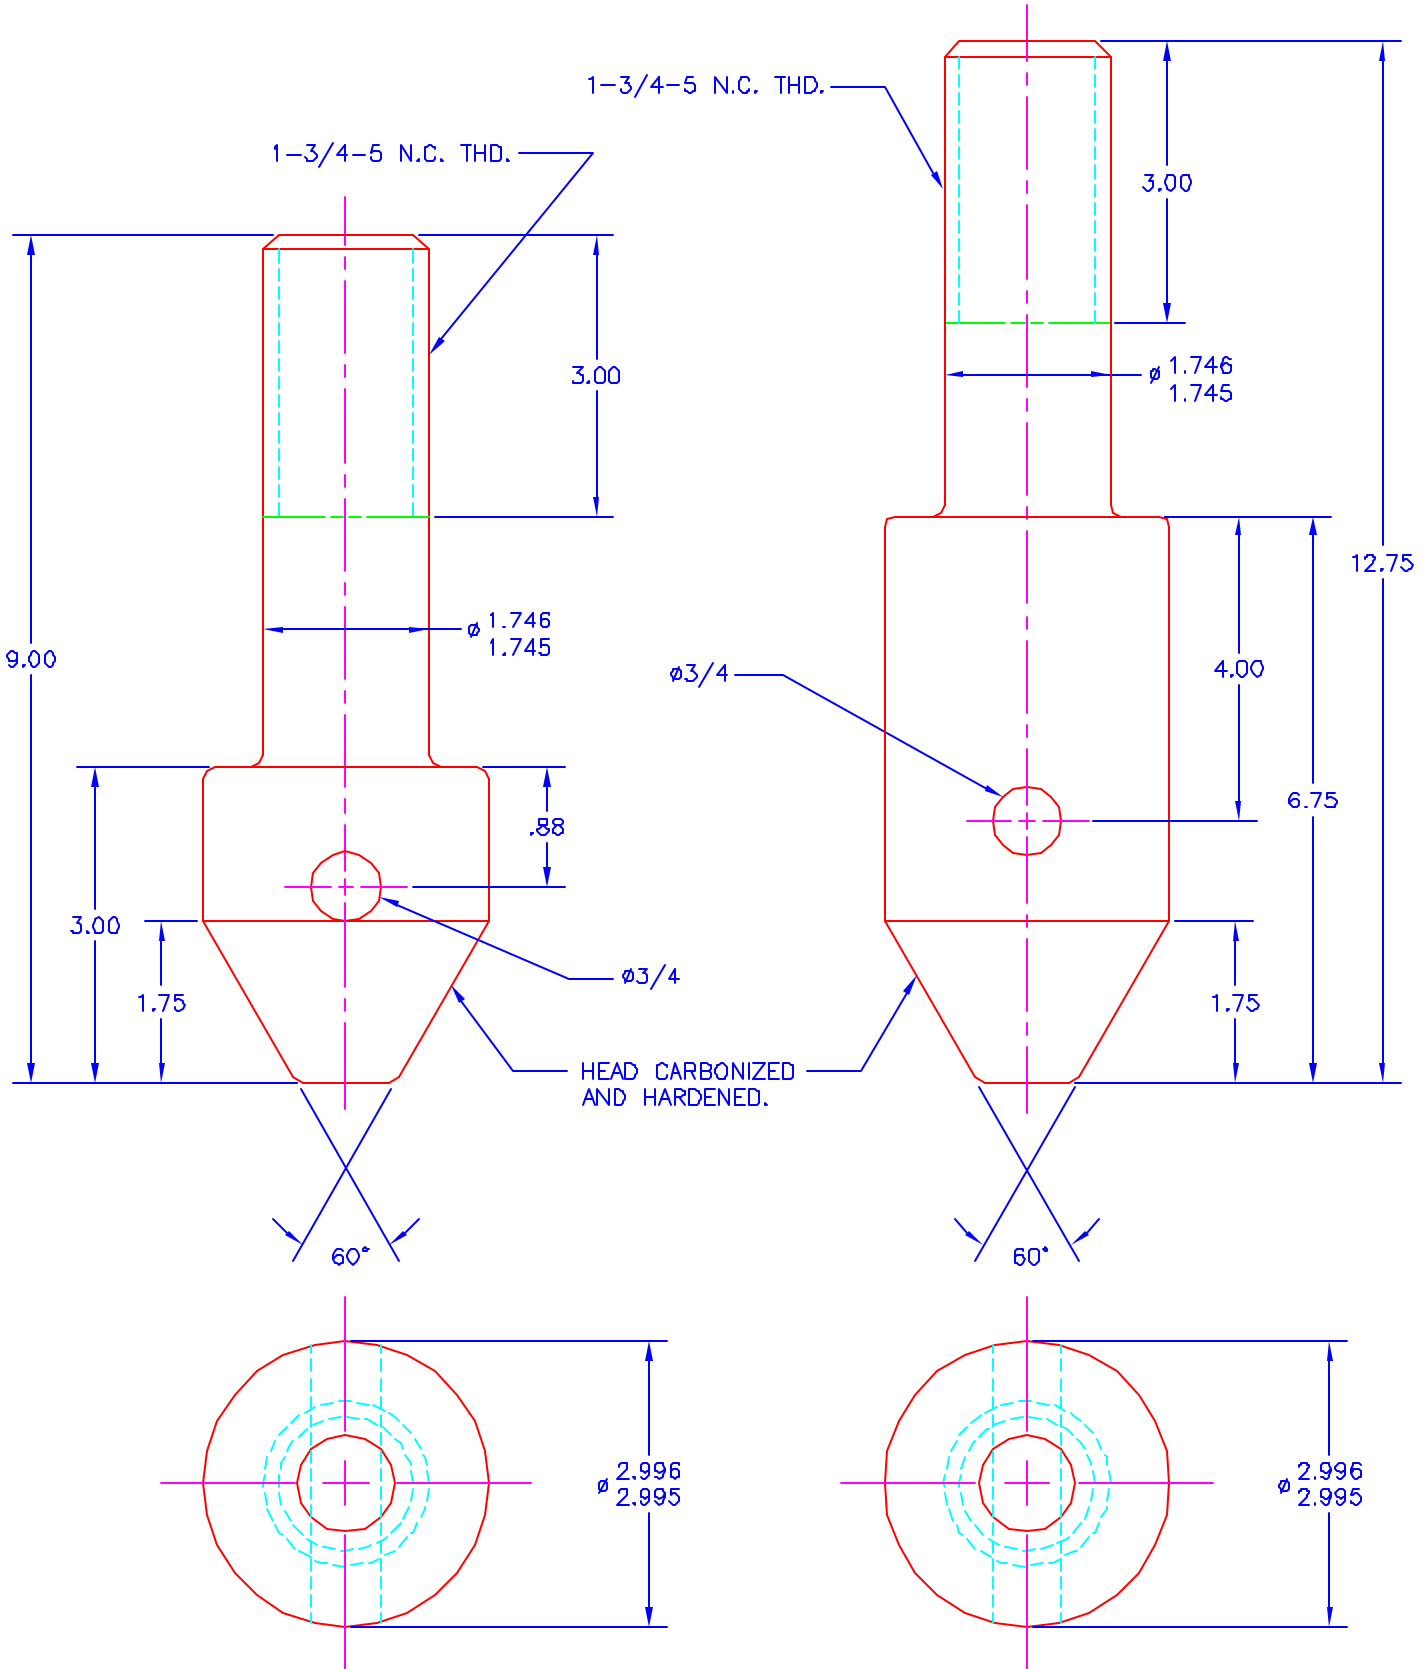

JOLICO NO.	REF. NO.
J-96305	DE1-0902

JOLICO NO.	REF. NO.
J-96304	DE1-0901