


## THIS ITEM IS SAFETY ITEM THAT IS USED TO KEEP AERIAL SLIDE GIBS FASTENED IN PLACE.

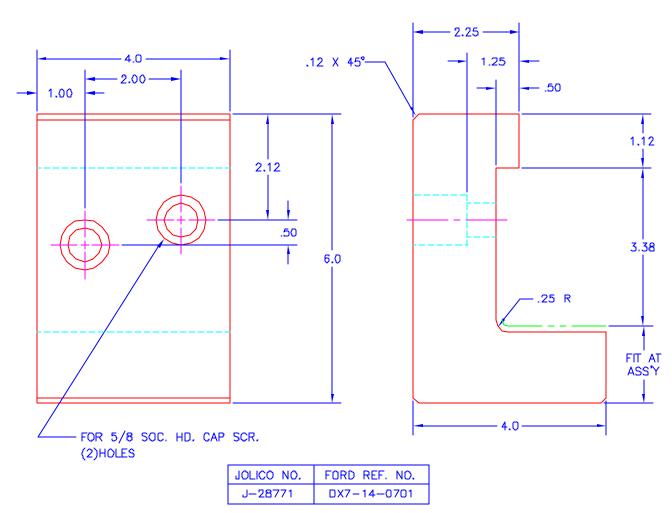

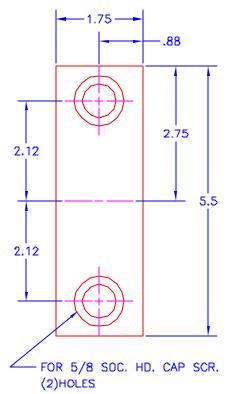

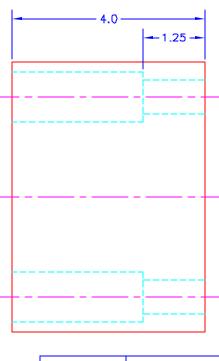

## DRIVER SPACER PLATE

THIS SPACER PLATE IS USED WHEN SLIDE DRIVER IS NOT CAST ON TO THE SHOE. IT SERVES AS A BACKUP PLATE BETWEEN THE LOOSE DRIVER AND THE MAIN CASTING.

JOLICO NO.	FORD REF. NO.
J-28823	DX7-22-2301